

# ***GLT Exports Limited***

## ***Premier MX Fire Detection/Alarm Panel and***

### ***Premier MX Repeater***

## ***User Operation Manual***

### **1. List Of Contents**

|   |    |
|---|----|
| 1. List Of Contents .....   | 1  |
| 2. Premier MX User Operation - Fire and Fault Conditions .....                        | 3  |
| 2.1. If a fire is detected:.....  | 3  |
| 2.2. To Silence the fire alarm sounders:.....   | 3  |
| 2.3. To Resound the fire alarm sounders after they have been silenced:.....           | 3  |
| 2.4. To Reset the panel from a Fire Alarm:.....                                       | 3  |
| 2.5. To operate the fire alarm sounders in Evacuate Mode:.....                        | 4  |
| 2.6. If a fault is detected:.....   | 4  |
| 2.7. To Silence the Buzzer: .....   | 4  |
| 3. Premier MX User Indications.....   | 5  |
| 3.1. User Indications [showing optional Clock Module] .....                           | 5  |
| 3.2. User Controls - [showing optional Clock Module].....                             | 6  |
| 4. Premier MX User Controls – Disablement and Test Conditions. ....                   | 7  |
| 4.1. To Disable/Enable any Zone or Zones.....   | 7  |
| 4.2. To Disable/Enable all Sounders.....  | 7  |
| 4.3. To Disable/Enable the Fire Routing Output.....                                   | 8  |
| 4.4. To Disable/Enable the Fault Routing Output.....                                  | 8  |
| 4.5. To Disable/Enable Fire Protection Output[s].....                                 | 9  |
| 4.6. To Select/Clear One Man Zone Test.....   | 10 |
| 4.7. To Select/Clear One Man Sounder Test.....  | 10 |
| 4.8. To Enable/Disable Delay Mode .....   | 11 |
| 4.9. To Override the Delay Mode .....   | 12 |
| 4.10. To Extend the Delay [from 1 <sup>st</sup> stage to 2 <sup>nd</sup> Stage] ..... | 12 |
| 4.11. Silencing the Alarms During the Delay: .....                                    | 12 |
| 4.12. Resounding the Alarms after the Delay: [Alarms previously silenced].....        | 12 |
| 5. User Operating Instructions for Optional Clock Module.....                         | 12 |
| 5.1. To Display Alarm Event Count: .....  | 12 |
| 5.2. To access the User Clock Module Edit Functions .....                             | 13 |
| 6. Premier MX Repeater Panel User Operation - Fire and Fault Conditions.....          | 15 |
| 6.1. If a fire is detected:.....  | 15 |
| 6.2. To Silence the fire alarm sounders:.....   | 15 |
| 6.3. To Resound the fire alarm sounders after they have been silenced:.....           | 15 |
| 6.4. To Reset the panel & repeater(s) from a Fire Alarm: .....                        | 15 |
| 6.5. To operate the fire alarm sounders in Evacuate Mode:.....                        | 16 |
| 6.6. If a fault is detected:.....   | 16 |
| 6.7. To Silence the Buzzer: .....   | 16 |
| Premier MX Repeater Panel Operation [16 zone version shown] .....                     | 17 |

7. Premier MX Repeater Panel User Controls [16 zone panel shown] ..... 18

8. Routine Testing and maintenance ..... 18

9. User responsibilities ..... 18

10. Premier MX Isolate/De-isolate/Test Mode Select Flowchart..... 19

***Danger***

***This equipment contains hazardous voltages that can cause death, serious personal injury, or equipment damage.***

***This equipment contains no user serviceable parts. Refer all maintenance to suitably qualified personnel.***

## **2. Premier MX User Operation - Fire and Fault Conditions**

### **2.1. If a fire is detected:**

- On the Premier MX Fire Alarm Panel:
  - The general Fire LED will flash and the buzzer will sound
  - The relevant zone Fire LED will flash, indicating the location of the fire.
  - If the Delay is OFF [Delay LED off]:
    - The Fire Routing output and LED will operate immediately
    - The Fire Alarm sounders will operate immediately
    - The Fire Protection output will operate immediately
  - If the Delay is ON [Delay LED flashing]:
    - The Fire Routing output and LED will operate after a delay [if the Fire Routing fault/disabled LED is illuminated].
    - The Fire Alarm sounders will operate after a delay [if Sounder fault/disabled LED is illuminated].
    - The Fire Protection output will operate after a delay [if Fire Protection fault/disabled LED is illuminated].
- Locate the source of the fire alarm (an LED will be visible on the detector which has been activated).

### **2.2. To Silence the fire alarm sounders:**

- Turn the Access Controls Keyswitch on the panel door to position “1”.
- Press the Silence Alarms/Resound button once only.
- The fire alarm sounders will become silent.
- The General Fire LED and the Zone Fire LED will become steady.
- Set the Access Controls Keyswitch back to position “0” to lock the controls.

### **2.3. To Resound the fire alarm sounders after they have been silenced:**

- Turn the Access Controls Keyswitch on the panel door to position “1”.
- Press the Silence Alarms/Resound button once only.
- Set the Access Controls Keyswitch back to position “0” to lock the controls.

### **2.4. To Reset the panel from a Fire Alarm:**

- After the fire has been extinguished, turn the Access Controls Keyswitch on the panel door to position “1”.
- Press the Reset button.
- The General Fire LED and the Zone Fire LED will clear.

- Set the Access Controls Keyswitch back to position “0” to lock the controls.

### **2.5. To operate the fire alarm sounders in Evacuate Mode:**

- Turn the Access Controls Keyswitch on the panel door to position “1”.
- Press the Evacuate button.
- The Evacuate LED will light and the panel buzzer will operate.
- All fire alarm sounders will operate.
- Press the Silence/Resound Alarm button to silence the fire alarm sounders and clear the Evacuate LED.
- Set the Access Controls Keyswitch back to position “0” to lock the controls.

### **2.6. If a fault is detected:**

- The panel buzzer will sound.
- The General Fault LED will flash.
- One or more fault LEDs will flash; identifying which element of the system is faulty.
- When the fault is corrected the fault indication will clear automatically unless the panel is configured to latched fault mode – in which case, operating the Reset button will clear the fault indication.

### **2.7. To Silence the Buzzer:**


- Press the Silence Buzzer button.
- The Silence Buzzer button LED will light.
- The buzzer will silence.

### 3. Premier MX User Indications

This section gives an overview of the functions available to the end user.

#### 3.1. User Indications [showing optional Clock Module]

| General Indicator Section      |                   |  |
|--------------------------------|-------------------|--|
| Indicator Description          | Indication Colour | Operating Condition  |
| Power Supply On                | Green             | Illuminates Steady for Mains or Standby power On.  |
| Fire                           | Red               | Flashes on any new fire alarm condition, changing to a steady indication on operation of Silence Alarms.                       |
| Fire Routing Active            | Red               | Illuminates Steady when the Fire Routing Output is active.   |
| General Fault                  | Yellow            | Flashes for any fault condition.   |
| Power Supply Fault             | Yellow            | Flashes for mains or standby power supply/charge fault   |
| System Fault                   | Yellow            | Illuminates Steady to indicate Microcontroller or Memory Failure.<br>Flashes to indicate Engineer's Configuration Mode active. |
| Earth Fault                    | Yellow            | Flashes for any positive or negative power supply earth fault.   |
| Fuse Fault                     | Yellow            | Flashes for any auxiliary supply fuse failure  |
| Repeater Fault                 | Yellow            | Flashes for any Repeater fault or repeater communication fault,  |
| Sounder Fault/Disabled         | Yellow            | Flashes for any sounder fault. Steady for sounders disabled.   |
| Sounder Test                   | Yellow            | Illuminates Steady while sounder walk test is active.  |
| Fire Protection Fault/Disabled | Yellow            | Flashes for a fault on the Fire Protection Output. Steady when Fire Protection Output is disabled.                             |
| Fire Routing Fault/Disabled    | Yellow            | Flashes for a fault on the Fire Routing Output. Steady when Fire Routing Output is disabled.                                   |
| Fault Routing Fault/Disabled   | Yellow            | Flashes for a fault on the Fault Routing Output. Steady when Fault Routing Output is disabled.                                 |

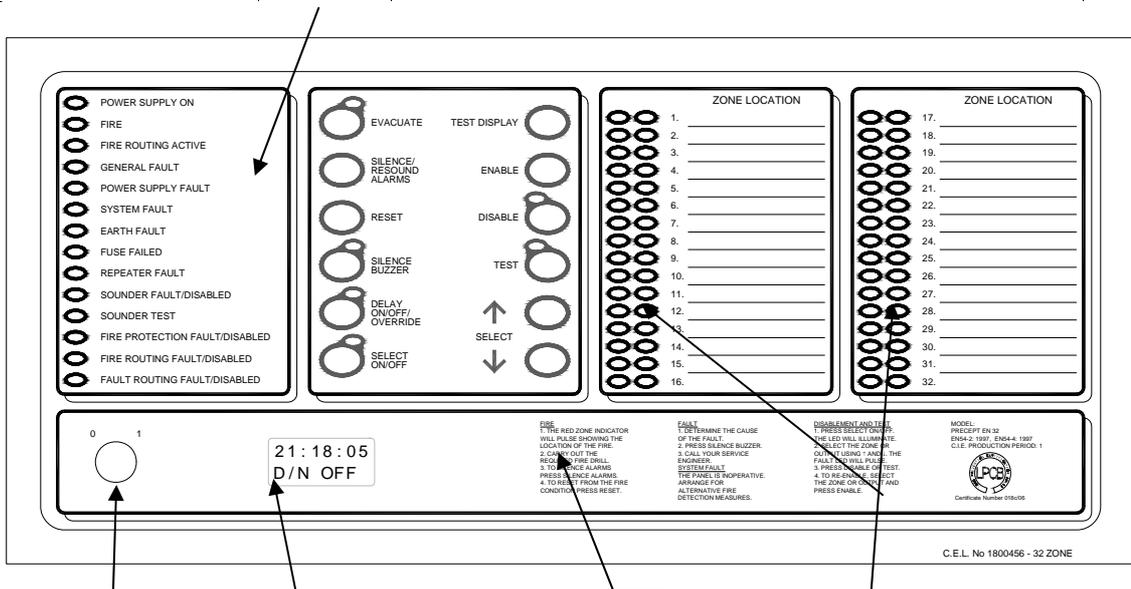


**Access Controls Keyswitch:**  
 0 – Controls Locked  
 1 – Controls Unlocked

**Clock Module [Optional]:**  
 Showing time and Day/Night off  
 Back light flashes for Clock  
 Module fault

**User Instructions**

| Zone Location Indications         |                   |   |
|-----------------------------------|-------------------|---|
| Indicator Description             | Indication Colour | Operating Condition   |
| User Generated Zone Location Text | Red               | Flashes when zone is in a fire condition, turning to steady on operation of Silence Alarms.     |
| User Generated Zone Location Text | Yellow            | Flashes when zone is in a fault condition. Illuminates steady when zone is disabled or in test. |

### 3.2. User Controls - [showing optional Clock Module]

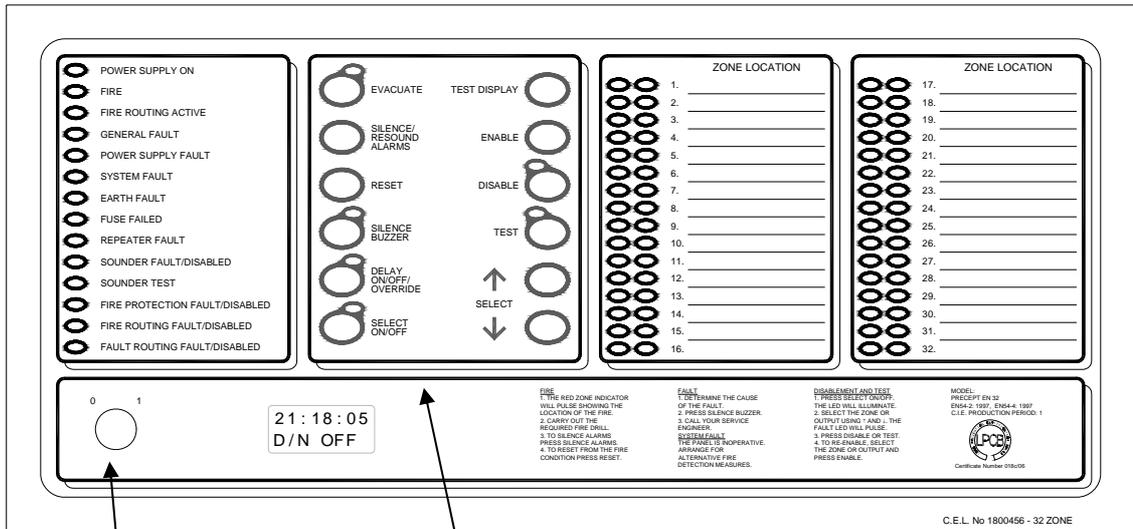

**Access Controls Keyswitch:**  
 0 – Controls Locked  
 1 – Controls Unlocked

| Switch Description     | Functionality   | Button Availability   |
|------------------------|---|---|
| Evacuate               | Operates all sounders continuously and lights the Evacuated LED adjacent the button until the silence button is operated  | When controls are unlocked  |
| Silence/Resound Alarms | Following a fire alarm condition, 1st operation stops sounders. The General Fire LED and the Zonal fire LED will change from flashing to steady. 2nd operation restarts the previously silenced sounders  | When controls are unlocked  |
| Reset                  | Clears the panel display, resets the zones, outputs and operates the reset relay.   | When controls are unlocked and [if silence before reset is configured] alarms silence switch has been operated.                               |
| Silence Buzzer         | 1] Press to stop the buzzer sounding in fire or fault conditions.<br>2] In 2 Stage Delay Mode, with stage 1 delay running, press to start stage 2 delay otherwise all delayed outputs operate when Stage 1 timer times out.   | When controls are locked or unlocked<br>When the panel is in the fire condition and the delay is running. Controls are locked or unlocked     |
| Delay On/Off/Override  | 1] Press once to Enable the delay mode, lighting the adjacent delay on LED. Press again to disable the delay mode and turn off the LED<br>2] Overrides the delay when delay is running, turning the delay mode and the LED off. All delayed outputs will operate immediately. | 1] When controls are unlocked and delay period is set to a value > 0.<br>2] When the panel is in the fire condition and the delay is running. |
| Select On/Off          | Enables the User select feature [ Select ↑ Select ↓] for selection of zones or outputs for disablement/re-enablement also Day/Night On/Off selection and setting current time on Clock Module when fitted.  | When controls are unlocked  |
| Test Display           | Press to illuminate all LEDs on the display and operate the buzzer. All indications remain active for approx 5 seconds after button release. Also displays alarm count on Clock Module [when fitted]  | When controls are locked or unlocked  |
| Enable                 | Press to clear the disablement or test condition on a zone or output selected via the User Select feature.  | When controls are unlocked, the Select switch has been operated and a zone or output has been selected.                                       |
| Disable                | Press to disable a zone or output selected via the User Select feature.   | As above.   |
| Test                   | Press to initiate the One Man Test on sounders or zones as selected via the User Select feature.  | As above.   |
| Select ↑ Select ↓      | Used to scroll the cursor indication through the zone and output fault LEDs on the display to select a zone or output for disablement, or test. [LED illuminated when Select Mode is active]. Also scrolls through Clock Module menu [when fitted].                           | When controls are unlocked and the Select switch has been operated.   |

#### **4. Premier MX User Controls – Disablement and Test Conditions.**

##### **4.1. To Disable/Enable any Zone or Zones.**

- **To Access disable/enable mode:**
  - Turn the Access Controls Keyswitch on the panel door to position “1”.
  - Press the Select On/Off button to enter the Select Mode:
  - The Select On LED will light.
  - The cursor indication will pulse the yellow Zone 1 fault/disabled/test LED.
- **To select the zone:**
  - Use the Select ↓ button to move the pulsed cursor indication down through the fault LEDs until it pulses the required zone. [The Select ↑ button moves the cursor up].
- **To disable the selected zone:**
  - Press the Disable button to disable the selected zone.
  - The zone fault/disabled LED will change to the “On-flash” indication while the cursor is on it, changing to steady if the cursor is moved on.
  - The general Disablement LED will light.
- **To enable the selected zone:**
  - Press the Enable button to enable the selected zone.
  - The zone fault/disabled LED will change to the “Off-flash” indication while the cursor is on it, changing to off if the cursor is moved on.
  - The general Disablement LED will be cleared if no other disablements are present.
- **To quit the disable/enable mode:**
  - To exit the Select Mode, press the Select On/Off button.
  - The Select On LED will clear.
  - The cursor indication will clear.
  - Set the Access Controls Keyswitch back to position “0” to lock the controls.

##### **4.2. To Disable/Enable all Sounders.**

- **To Access disable/enable mode:**
  - Turn the Access Controls Keyswitch on the panel door to position “1”.
  - Press the Select On/Off button to enter the Select Mode:
  - The Select On LED will light.
  - The cursor indication will pulse the yellow Zone 1 fault/disabled/test LED.
- **To select the sounders:**
  - Use the Select ↑ button to move the pulsed cursor indication up through the fault LEDs until it pulses the Sounder Fault/Disabled and Sounder Test LEDs. [The Select ↓ button moves the cursor down].
- **To disable the sounders:**
  - Press the Disable button to disable the sounders.
  - The Sounder Fault/Disabled LED will change to the “On-flash” indication while the cursor is on it, changing to steady if the cursor is moved.

- The general Disablement LED will light.
- **To enable the sounders:**
  - Press the Enable button to enable the sounders.
  - The Sounder Fault/Disabled LED will change to the “Off-flash” indication while the cursor is on it, changing to off if the cursor is moved on.
  - The general Disablement LED will be cleared if no other disablements are present.
- **To quit the disable/enable mode:**
  - To exit the Select Mode, press the Select On/Off button.
  - The Select On LED will clear.
  - The cursor indication will clear.
  - Set the Access Controls Keyswitch back to position “0” to lock the controls.

#### **4.3. To Disable/Enable the Fire Routing Output.**

- **To Access disable/enable mode:**
  - Turn the Access Controls Keyswitch on the panel door to position “1”.
  - Press the Select On/Off button to enter the Select Mode:
  - The Select On LED will light.
  - The cursor indication will pulse the yellow Zone 1 fault/disabled/test LED.
- **To select the Fire Routing Output:**
  - Use the Select ↑ button to move the pulsed cursor indication up through the fault LEDs until it pulses the Fire Routing Fault/Disabled LED. [The Select ↓ button moves the cursor down].
- **To disable the Fire Routing Output:**
  - Press the Disable button to disable the Fire Routing Output.
  - The Fire Routing Fault/Disabled LED will change to the “On-flash” indication while the cursor is on it, changing to steady if the cursor is moved.
  - The general Disablement LED will light.
- **To enable the Fire Routing Output:**
  - Press the Enable button to enable the Fire Routing Output.
  - The Fire Routing Fault/Disabled LED will change to the “Off-flash” indication while the cursor is on it, changing to off if the cursor is moved on.
  - The general Disablement LED will be cleared if no other disablements are present.
- **To quit the disable/enable mode:**
  - To exit the Select Mode, press the Select On/Off button.
  - The Select On LED will clear.
  - The cursor indication will clear.
  - Set the Access Controls Keyswitch back to position “0” to lock the controls.

#### **4.4. To Disable/Enable the Fault Routing Output.**

- **To Access disable/enable mode:**
  - Turn the Access Controls Keyswitch on the panel door to position “1”.

- Press the Select On/Off button to enter the Select Mode:
- The Select On LED will light.
- The cursor indication will pulse the yellow Zone 1 fault/disabled/test LED.
- **To select the Fault Routing Output:**
  - Use the Select ↑ button to move the pulsed cursor indication up through the fault LEDs until it pulses the Fault Routing Fault/Disabled LED. [The Select ↓ button moves the cursor down].
- **To disable the Fault Routing Output:**
  - Press the Disable button to disable the Fault Routing Output.
  - The Fault Routing Fault/Disabled LED will change to the “On-flash” indication while the cursor is on it, changing to steady if the cursor is moved.
  - The general Disablement LED will light.
- **To enable the Fault Routing Output:**
  - Press the Enable button to enable the Fault Routing Output.
  - The Fault Routing Fault/Disabled LED will change to the “Off-flash” indication while the cursor is on it, changing to off if the cursor is moved on.
  - The general Disablement LED will be cleared if no other disablements are present.
- **To quit the disable/enable mode:**
  - To exit the Select Mode, press the Select On/Off button.
  - The Select On LED will clear.
  - The cursor indication will clear.
  - Set the Access Controls Keyswitch back to position “0” to lock the controls.

#### 4.5. To Disable/Enable Fire Protection Output[s].

- **To Access disable/enable mode:**
  - Turn the Access Controls Keyswitch on the panel door to position “1”.
  - Press the Select On/Off button to enter the Select Mode:
  - The Select On LED will light.
  - The cursor indication will pulse the yellow Zone 1 fault/disabled/test LED.
- **To select the Fire Protection Output:**
  - Use the Select ↑ button to move the pulsed cursor indication up through the fault LEDs until it pulses the Fire Protection Fault/Disabled LED. [The Select ↓ button moves the cursor down].
- **To disable the Fire Protection Output:**
  - Press the Disable button to disable the Fire Protection Output.
  - The Fire Protection Fault/Disabled LED will change to the “On-flash” indication while the cursor is on it, changing to steady if the cursor is moved.
  - The general Disablement LED will light.
- **To enable the Fire Protection Output:**
  - Press the Enable button to enable the Fire Protection Output.

- The Fire Protection Fault/Disabled LED will change to the “Off-flash” indication while the cursor is on it, changing to off if the cursor is moved on.
- The general Disablement LED will be cleared if no other disablements are present.
- **To quit the disable/enable mode:**
  - To exit the Select Mode, press the Select On/Off button.
  - The Select On LED will clear.
  - The cursor indication will clear.
  - Set the Access Controls Keyswitch back to position “0” to lock the controls.

#### 4.6. To Select/Clear One Man Zone Test.

- **To access test selection mode:**
  - Turn the Access Controls Keyswitch on the panel door to position “1”.
  - Press the Select On/Off button to enter the Select Mode:
  - The Select On LED will light.
  - The cursor indication will pulse the yellow Zone 1 fault/disabled/test LED.
- **To select the zone to be tested:**
  - Use the Select ↓ button to move the pulsed cursor indication down through the fault LEDs until it pulses on the required zone. [The Select ↑ button moves the cursor up].
- **To apply the test mode to the selected zone:**
  - Press the Test button to activate the test condition on the selected zone.
  - The zone fault/disabled LED will change to the “On-flash” indication while the cursor is on it, changing to steady if the cursor is moved on.
  - The general Test LED will light.
- **To clear the test mode on the selected zone:**
  - Press the Test button again or press the Enable button to clear the test condition enabling normal operation of the selected zone.
  - The zone fault/disabled LED will change to the “Off-flash” indication while the cursor is on it, changing to off if the cursor is moved on.
  - The general Test LED will be cleared if no other circuits are in the test condition.
- **To quit the zone test selection mode:**
  - To exit the Select Mode, press the Select On/Off button.
  - The Select On LED will clear.
  - The cursor indication will clear.
  - Set the Access Controls Keyswitch back to position “0” to lock the controls.

#### 4.7. To Select/Clear One Man Sounder Test.

- **To access test selection mode:**
  - Turn the Access Controls Keyswitch on the panel door to position “1”.
  - Press the Select On/Off button to enter the Select Mode:
  - The Select On LED will light.
  - The cursor indication will pulse the yellow Zone 1 fault/disabled/test LED.

- **To select the sounders:**
  - Use the Select ↑ button to move the pulsed cursor indication up through the fault LEDs until it pulses the Sounder Fault/Disabled and Sounder Test LEDs. [The Select ↓ button moves the cursor down].
- **To activate the sounder test:**
  - Press the Test button to start the sounder test.
  - The Sounder Test LED will change to the “On-flash” indication while the cursor is on it, changing to steady if the cursor is moved.
  - The general Test LED will light.
  - The sounders will operate for 2 seconds every 15 seconds until the test mode is switched off.
- **To terminate the sounder test:**
  - Press the Test button again or press the Enable button to clear the test condition enabling normal operation of sounders.
  - The sounders will silence.
  - The Sounder Test LED will change to the “Off-flash” indication while the cursor is on it, changing to off if the cursor is moved on.
  - The general Test LED will be cleared if no other circuits are in the test condition.
- **To quit test selection mode:**
  - To exit the Select Mode, press the Select On/Off button.
  - The Select On LED will clear.
  - The cursor indication will clear.
  - Set the Access Controls Keyswitch back to position “0” to lock the controls.

#### 4.8. To Enable/Disable Delay Mode

- **To access delay mode selection:**
  - Turn the Access Controls Keyswitch on the panel door to position “1”.
- **To enable the delay:**
  - Press the Delay On/Off/Override button once to enable the Delay Mode.
  - The Delay On/Off LED will light.
  - The disable switch LED will light.
  - The fault/disabled LED for each delayed output will light.
- **To display the outputs configured to be delayed:**
  - With the panel in the quiescent condition select the Access Controls Keyswitch to position “1”.
  - Press and hold the Disablement button.
  - The fault/disabled LED on each output set to the delay mode will illuminate.
  - The indications will clear when the Disablement button is released.
- **To disable the delay:**
  - With the Delay On, press the Delay On/Off/Override button once to disable the Delay Mode.
  - The Delay On/Off LED will clear.
  - The disable switch LED will clear.
  - The fault/disabled LED for each delayed output will clear.



**ALARMS :-**  
**NNNN** (0000 to 9999)

Note: If the ZERO DIL switch on the timer module is in the ON position, the alarm counter is cleared to zero and the alarm counter is not functional.. In this condition the normal time will still be displayed and the LCD backlight will illuminate when Test Display is operated but above message will not be displayed.

The Test Display button does not need to be held pressed. The Alarm Count will be displayed for 5 seconds and then the display will return to normal.

## 5.2. To access the User Clock Module Edit Functions

Select Access Control key switch to position 1.

Press the SELECT ON/OFF switch.

Use the “Up/down” keys to scroll the cursor LED indication through the selectable options on the panel display LEDs until the LCD backlight illuminates. Normal Time Display:

**HH:MM:SS** or **HH:MM:SS**  
**D/N ON** **D/N OFF**

- **To select Day/Night Mode to On/Off:**

Press the SELECT ON/OFF button to enter Day/Night mode On/Off Set Display:

**D/N ON** or **D/N OFF**  
**Change?** **Change?**

Pressing ENABLE (+) or DISABLE (-) toggles setting between **D/N ON** and **D/N OFF**.

- **To set Current Time:**

Press SELECT ↓, to enter current Time Set Display:

**HH:MM:SS** *HH flashing*  
**Time Set**

Press ENABLE (+) or DISABLE (-) to change HH to desired value (00 to 23)

Press SELECT ↓, Time Set Display:

**HH:MM:SS** *MM flashing*  
**Time Set**

Press ENABLE (+) or DISABLE (-) to change MM to desired value (00 to 59)

Press SELECT ↓, Time Set Display:

**HH:MM:SS** *SS flashing*

### Time Set

Press ENABLE (+) or DISABLE (-) to reset the SS value to zero.

Press SELECT ↓, Time Set Display to exit to Day/Night mode On/Off Set Display:

**D/N ON**                      or            **D/N OFF**  
**Change?**                                      **Change?**

Pressing SELECT ↓ repeats the cursor/display changes as above.

Pressing SELECT ↑ repeats the cursor/display changes as above in reverse.

- **To exit Clock Module Menu:**

Press SELECT ON/OFF: Module switches off the LCD Backlight and exits configuration mode. Normal Time Display:

**HH:MM:SS**                      or            **HH:MM:SS**  
**D/N ON**                                      **D/N OFF**

On completion of editing, return the Access Control keyswitch to position 0.

## **6. Premier MX Repeater Panel User Operation - Fire and Fault Conditions**

### **6.1. If a fire is detected:**

- On the Premier MX Repeater Panel:
  - The general Fire LED will flash and the buzzer will sound
  - The relevant zone Fire LED will flash, indicating the location of the fire.
  - If the Delay is OFF [Delay LED off]:
    - The Fire Routing output and LED will operate immediately
    - The Fire Alarm sounders will operate immediately
    - The Fire Protection output will operate immediately
  - If the Delay is ON [Delay LED flashing]:
    - The Fire Routing output and LED will operate after a delay [if the Fire Routing fault/disabled LED is illuminated].
    - The Fire Alarm sounders will operate after a delay [if Sounder fault/disabled LED is illuminated].
    - The Fire Protection output will operate after a delay [if Fire Protection fault/disabled LED is illuminated].
- Locate the source of the fire alarm (an LED will be visible on the detector which has been activated).

### **6.2. To Silence the fire alarm sounders:**

- Turn the Access Controls Keyswitch on the repeater door to position “1”.
- Press the Silence Alarms/Resound button once only.
- The fire alarm sounders will become silent.
- The General Fire LED and the Zone Fire LED will become steady.
- Set the Access Controls Keyswitch back to position “0” to lock the controls.

### **6.3. To Resound the fire alarm sounders after they have been silenced:**

- Turn the Access Controls Keyswitch on the repeater door to position “1”.
- Press the Silence Alarms/Resound button once only.
- Set the Access Controls Keyswitch back to position “0” to lock the controls.

### **6.4. To Reset the panel & repeater(s) from a Fire Alarm:**

- After the fire has been extinguished, turn the Access Controls Keyswitch on the repeater door to position “1”.
- Press the Reset button.
- The General Fire LED and the Zone Fire LED will clear.

- Set the Access Controls Keyswitch back to position “0” to lock the controls.

**6.5. To operate the fire alarm sounders in Evacuate Mode:**

- Turn the Access Controls Keyswitch on the repeater door to position “1”.
- Press the Evacuate button.
- The Evacuate LED will light and the repeater buzzer will operate.
- All fire alarm sounders will operate.
- Press the Silence/Resound Alarm button to silence the fire alarm sounders and clear the Evacuate LED.
- Set the Access Controls Keyswitch back to position “0” to lock the controls.

**6.6. If a fault is detected:**


- The repeater buzzer will sound.
- The General Fault LED will flash.
- One or more fault LEDs will flash; identifying which element of the system is faulty.
- When the fault is corrected the fault indication will clear automatically unless the panel is configured to latched fault mode – in which case, operating the Reset button will clear the fault indication.

**6.7. To Silence the Buzzer:**

- Press the Silence Buzzer button.
- The Silence Buzzer button LED will light.
- The buzzer will silence.

**Premier MX Repeater Panel Operation [16 zone version shown]**


| General Indicator Section      |                   |  |
|--------------------------------|-------------------|--|
| Indicator Description          | Indication Colour | Operating Condition  |
| Power Supply On                | Green             | Steady indication for Mains or Standby power On.   |
| Fire                           | Red               | Flashes on any new fire alarm condition, changing to a steady indication on operation of Silence Alarms. |
| Fire Routing Active            | Red               | Steady indication when the Fire Routing Output is active.  |
| General Fault                  | Yellow            | Flashes for any fault condition.   |
| Power Supply Fault             | Yellow            | Flashes for mains or standby power supply/charge fault   |
| System Fault                   | Yellow            | Steady indication to indicate Microcontroller Failure.   |
| General Test                   | Yellow            | Steady indication when the zone or sounder test is active.   |
| General Disablement            | Yellow            | Steady indication whilst a zone or output is disabled.   |
| Communications Fault           | Yellow            | Flashes for a communications failure between the fire panel and repeater.                                |
| Sounder Fault/Disabled         | Yellow            | Flashes for any sounder fault. Steady for sounders disabled.   |
| Sounder Test                   | Yellow            | Steady indication while sounder walk test is active.   |
| Fire Protection Fault/Disabled | Yellow            | Flashes for a fault on the Fire Protection Output. Steady when Fire Protection Output is disabled.       |
| Fire Routing Fault/Disabled    | Yellow            | Flashes for a fault on the Fire Routing Output. Steady when Fire Routing Output is disabled.             |
| Fault Routing Fault/Disabled   | Yellow            | Flashes for a fault on the Fault Routing Output. Steady when Fault Routing Output is disabled.           |

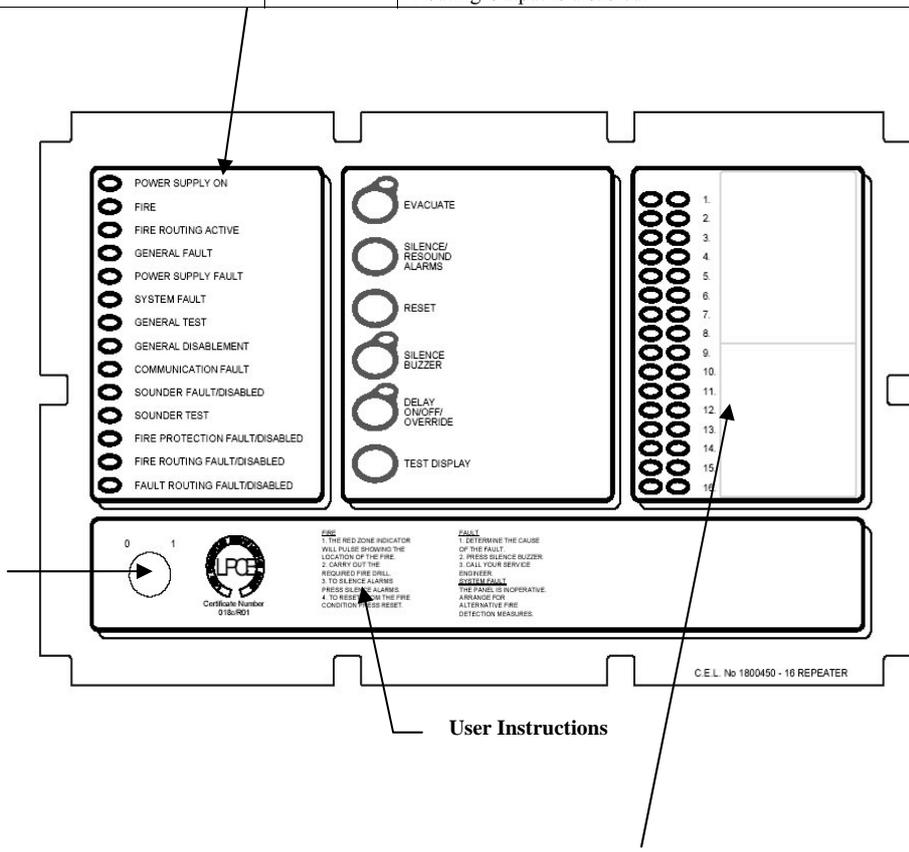

**Access Controls**  
**Keyswitch:**  
 0 – Controls Locked  
 1 – Controls Unlocked

| Zone Location Indications         |                   |   |
|-----------------------------------|-------------------|---|
| Indicator Description             | Indication Colour | Operating Condition   |
| User Generated Zone Location Text | Red               | Flashes when zone is in a fire condition, turning to steady on operation of Silence Alarms.     |
| User Generated Zone Location Text | Yellow            | Flashes when zone is in a fault condition. Illuminates steady when zone is disabled or in test. |

**7. Premier MX Repeater Panel User Controls [16 zone panel shown]**

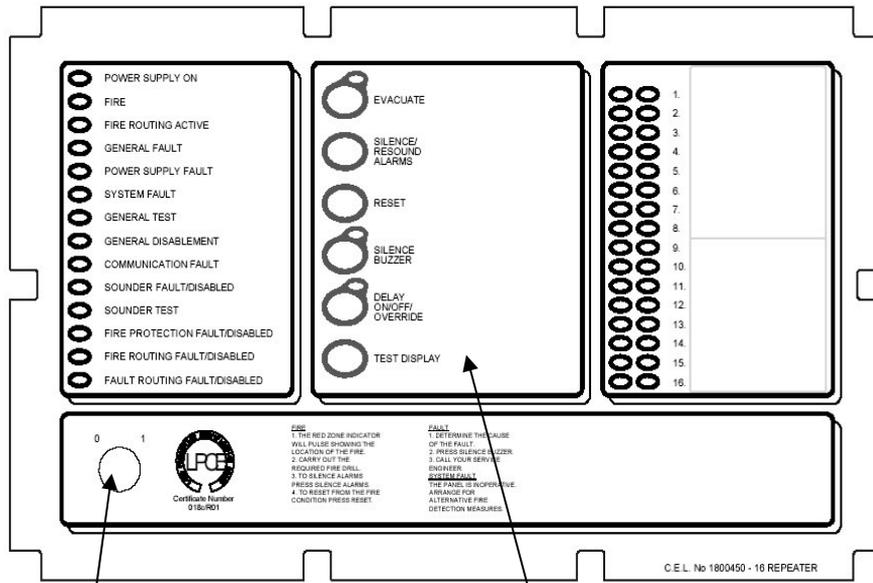

**Access Controls Keyswitch:**  
 0 – Controls Locked  
 1 – Controls Unlocked

| Switch Description     | Functionality   | Button Availability   |
|------------------------|---|---|
| Evacuate               | Operates all sounders continuously and lights the Evacuated LED adjacent the button until the silence button is operated  | When controls are unlocked  |
| Silence/Resound Alarms | Following a fire alarm condition, 1st operation stops sounders. The General Fire LED and the Zonal fire LED will change from flashing to steady. 2nd operation restarts the previously silenced sounders  | When controls are unlocked  |
| Reset                  | Clears the panel display, resets the zones, outputs and operates the reset relay.   | When controls are unlocked and [if silence before reset is configured] alarms silence switch has been operated.                                   |
| Silence Buzzer         | 1] Press to stop the buzzer sounding in fire or fault conditions.<br>2] In 2 Stage Delay Mode, with stage 1 delay running, press to start stage 2 delay otherwise all delayed outputs operate when Stage 1 timer times out.   | When controls are locked or unlocked<br><br>When the panel is in the fire condition and the delay is running. Controls are locked or unlocked     |
| Delay On/Off/Override  | 1] Press once to Enable the delay mode, lighting the adjacent delay on LED. Press again to disable the delay mode and turn off the LED<br><br>2] Overrides the delay when delay is running, turning the delay mode and the LED off. All delayed outputs will operate immediately. | 1] When controls are unlocked and delay period is set to a value > 0.<br><br>2] When the panel is in the fire condition and the delay is running. |
| Test Display           | Press to illuminates all LEDs on the display and operate the buzzer. All indications remain active for approx 5 seconds after button release.   | When controls are locked or unlocked  |

**8. Routine Testing and maintenance**

See Premier MX Log Book for details.

**9. User responsibilities**

See Premier MX Log Book for details

### 10. Premier MX Isolate/De-isolate/Test Mode Select Flowchart

