

Prem1er Quatro


REPEATER Setup Manual



INSTALLATION MANUAL

Contents	Page No.
1.0 Mounting the Repeater Panel.....	2
2.0 Programming.....	3
2.1 Accessing the repeater.....	3
2.2 Network Setup.....	3
2.3 Language.....	4
2.4 Password.....	4
2.5 Check Version.....	4
2.6 FW Upgrade.....	4
2.7 Exit Setup.....	4

1.0 FIXING THE BACK BOX TO THE WALL

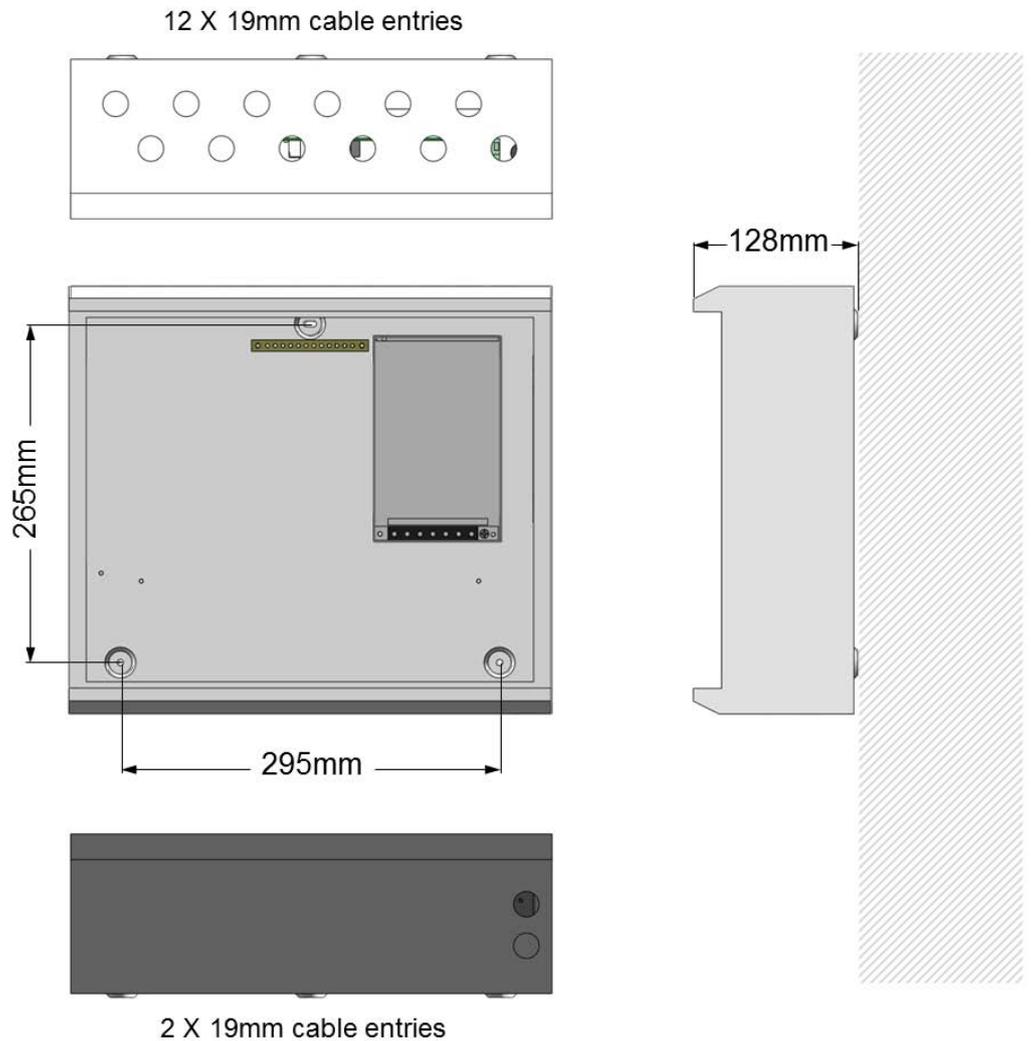

*Figure 2: Plan view inside the enclosure without PCBs. Side view for surface installation.
(Dimensions: mm)*

Fix the enclosure to the wall using the three mounting holes provided (2 circular holes near the bottom of the rear face and one “keyhole” near the top of the rear face).

Check the build & condition of the wall to decide a suitable screw fixing.

The mounting holes are designed for No 8 roundhead or countersunk woodscrews (or similar).

Remove any debris from the enclosure.


Take care not to damage the FACP during installation.

Repeater RS485 Connections



There are two ways in which to wire the repeater panel to the net work.

- Wire as a loop or ring as shown in the diagram
- Wire as a bus (from A to B and so on)

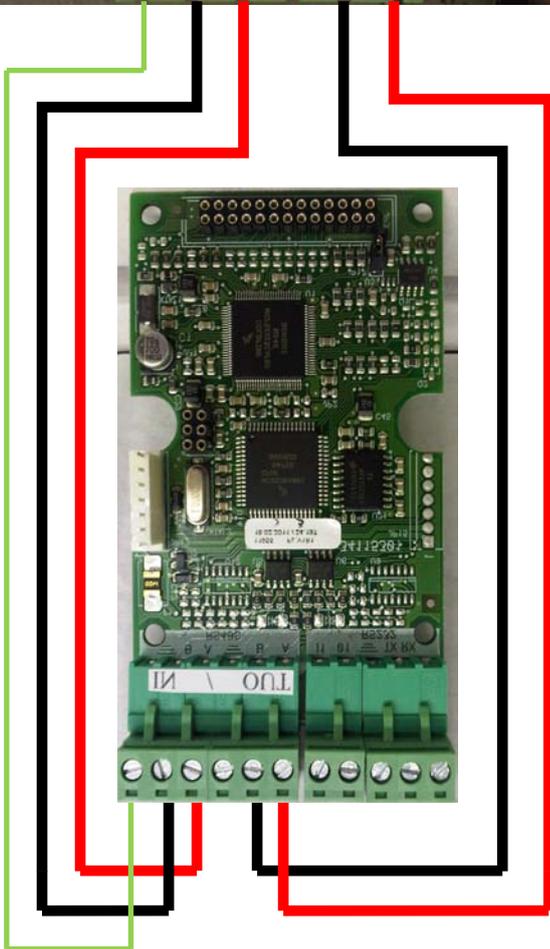

Quatro Network card connections

2.0 PROGRAMMING THE QUATRO REPEATER

2.1 Accessing the repeater.

- Enter the password (default code 2222)
- Press key. Enter the code as follows

Password
[x] [x] [x] [x]

- Press NEXT> twice to enter the number 2 followed by the key. Repeat this for the remaining 3 digits.

Password
<2> <2> <2> <2>

Once the code has been entered you will see the following menu.

- NETWORK
- LANGUAGE
- PASSWORD
- CHECK VERSION
- FW UPGRADE
- BACK

Network
Language
Password
Check Version
FW Upgrade
Back

By pressing the NEXT> or <PREV keys will scroll through the menu options.

2.2 Network Setup

The repeater requires a network address (Node number) to be assigned to it. To set the network address.

- Press to enter the network menu

Network Network Address
 Network Filter
 Back

- Enter the Node address by pressing the <PREV or NEXT> keys to scroll to the required address number then press

Network Address
Current Address: (041)
New Address: (000)

- Now scroll down to NETWORK FILTER by pressing the NEXT> key and then press

Network Filters
Node Type <Listen All>
New Address [000]

- Press NEXT> to scroll to BACK and press to exit the network menu

2.3 Language

The repeater has two language options.

- ENGLISH
- SPANISH




```
Language Selection
Language English
```

Press to enter the menu and then by pressing the <PREV or NEXT> key will scroll between the two options. Press to exit back to the main menu.

2.4 Password

This option allows the engineer to change the pass code for the repeater panel.

- Press
- Press <PREV or NEXT> to enter the first digit followed by . Repeat this for the remaining 3 digits.

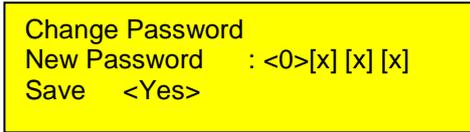


```
Change Password
New Password : <0>[x] [x] [x]
Save <Yes>
```

The new code will be display and you will then be asked to save the new code. Press to save and exit to the main menu.

2.5 Check Version.

This option will display the current software version of the repeater panel e.g. V1.44. Press to exit to the main menu.

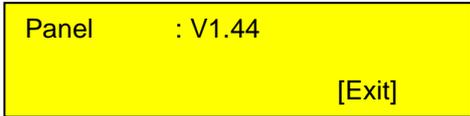

```
Panel : V1.44
[Exit]
```

2.6 FW Upgrade.

This option is used for upgrading the firmware of the panel. If this is required please contact Zeta Alarm Systems for instructions.

2.7 Back.

Press to exit programming mode.