

ZT-CP3/AD Zeta Addressable Manual Call Point

This unique manual call point mimics the feel of breaking glass whilst offering the user the benefits and safety advantages of a glass-free resettable operating element. Once activated a warning flag drops in to view easily identifying the call point that has been operated. A key can then reset the unit. It is ideal for industries that are sensitive to broken glass as well as areas that suffer from a high number of false activations such as, schools, shopping centres and other public places.

ZT-CP3/AD Zeta Addressable MCP - Technical Info


The ZT-CP3/AD Addressable call point uses our new fyreye II addressable protocol. This offers up to 250 devices per loop. They will not run on the same loop as our original Zeta Addressable Protocol devices. But in order to provide support for legacy systems running our original Zeta Addressable Protocol, these call points can be set to run the old protocol by fitting a jumper link (see below). These Call points have a built in loop short circuit isolator to help maintain system integrity in the event of a short circuit fault on the loop

Mounting Method

Note: For security reasons the call point is deliberately difficult to remove from the back box once fitted. Please ensure that the call point is installed correctly BEFORE snapping closed.

The ZT-CP3/AD call point is supplied with its own surface mounting back box. 20mm cable entries can be easily cut using the template provided on each pack box (see illustration below)


With the screws provided, fix the back box to the wall. Carefully attach the call point to the top of the back box, and hinge down to snap securely into place.

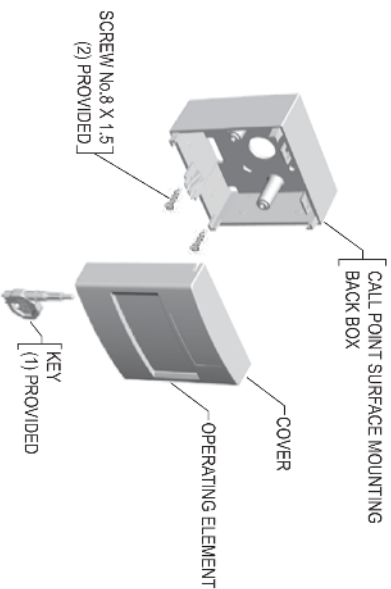

IMPORTANT NOTICE


For security reasons the call point is deliberately difficult to remove from the back box once fitted. Please ensure that the call point is installed correctly before snapping closed. Carefully attach the call point to the top of the back box. Hinge down to snap securely into place. (As illustrated in Dia. A).

Dimensions

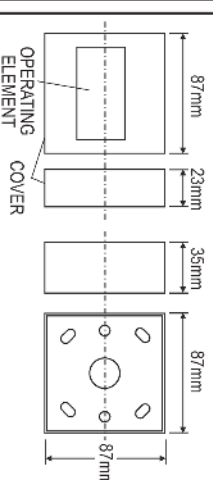

Detaching the lid

1. Insert key into the bottom of the lid.
2. Keep the key inserted and with your hand pull the lid towards you. (As illustrated in Dia. C)

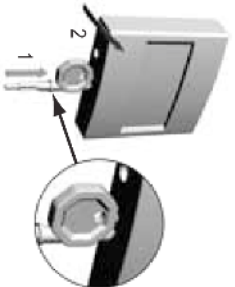


Terminal Connections

Connect loop out -ve cable to the spare IN- to Bypass Loop Isolator, or to OUT- to use the Loop Short Circuit Isolator

PCB LABEL	USED FOR
IN -	IN -
IN -	OUT - (No S/C Iso)
IN +	IN +
IN +	OUT +
OUT -	OUT - (Uses S/C Iso)
EARTH	EARTH

Loop Wiring

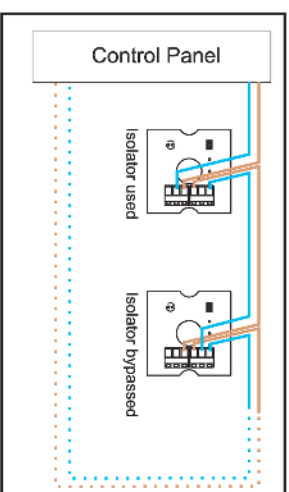

Protocol Selection

Jumper Open/Removed: Fyreye Mk II Protocol
Jumper closed: Original Zeta Protocol

NOTE: Jumper selection must be made BEFORE powering up the call point. Protocol can not be changed while MCP is running.

Specification

MODEL	ZT-CP3/AD
INPUT VOLTAGE	17-28V DC
ELEMENT TYPE	Resettable
QUIESCENT CURRENT	600uA Max
ALARM CURRENT	2.5mA Max
OPERATING TEMP	-20 to +60
MAX HUMIDITY	95% RH N.C.
IP RATING	IP32
SIZE (W x H x D mm)	87 x 87 x 23
PROTOCOL SPECIFICATION	
Fyreye Mk II Protocol -	Quattro
Fyreye Mk II Protocol -	Simplitly
Zeta Addressable Protocol- All panes:	Max 250 per loop
	Max 126 per loop
	Zeta Addressable Protocol- All panes:
	Max 126 per loop

Address setting

The address setting is BINARY with the switch in the ON position being a Binary 0, and the switch in the OFF position being a Binary 1

To work out an address, add together the values for each switch that is in the OFF position

In the example, the address is:-
 Switch 1, switch 3 and switch 5 OFF
 = 1 + 4 + 16
 = Address 21

NOTE: Switch 8 has no effect in Original Zeta Protocol Mode.

Short Circuit Isolator Specification

PARAMETER	RATING
V MAX	28 V
V HOLD	27 V
V MIN	15.7 V
V SO MAX	15.2 V
V SO MIN	10.29 V
V SO MAX	422 mV
V SO MIN	202.5 mV
I MAX	1 A
I MIN	2.16 mA
Z MAX	0.23 Ohm



Zeta Alarms Limited
 Detection House, 72-78 Morfa Road, Swansea SA1 2EN
 Telephone: +44 (0)1292 455 175. Email: info@zetaalarmssystem.com

ZT-CP3/AD Zeta Addressable MCP Address Switch Settings

The ZT-CP3/AD addressable call point uses an 8 way dip switch to set the device address. The table below shows the position of each one of the dip switches, whether they are to the ON or OFF position. Only addresses 1 to 250 are used. the other addresses will not be recognised by the panel.

If the call point is running in Original Zeta Protocol Mode, dip switch 8 is ignored as that protocol only uses 126 addresses

Simplicity panels running fyreye MK II protocol do not support 250 addresses per loop. Please ensure that only addresses 1-126 are used on simplicity systems.



ADDR	1	2	3	4	5	6	7	8
1	.= OFF	ON	ON	ON	ON	ON	ON	ON
2	.= ON	OFF	ON	ON	ON	ON	ON	ON
3	.= OFF	OFF	ON	ON	ON	ON	ON	ON
4	.= ON	ON	OFF	ON	ON	ON	ON	ON
5	.= OFF	ON	OFF	ON	ON	ON	ON	ON
6	.= ON	OFF	OFF	ON	ON	ON	ON	ON
7	.= OFF	OFF	OFF	ON	ON	ON	ON	ON
8	.= ON	ON	ON	OFF	ON	ON	ON	ON
9	.= OFF	ON	ON	OFF	ON	ON	ON	ON
10	.= ON	OFF	ON	OFF	ON	ON	ON	ON
11	.= OFF	OFF	ON	OFF	ON	ON	ON	ON
12	.= ON	ON	OFF	OFF	ON	ON	ON	ON
13	.= OFF	ON	OFF	OFF	ON	ON	ON	ON
14	.= ON	OFF	OFF	OFF	ON	ON	ON	ON
15	.= OFF	OFF	OFF	OFF	ON	ON	ON	ON
16	.= ON	ON	ON	ON	OFF	ON	ON	ON
17	.= OFF	ON	ON	ON	OFF	ON	ON	ON
18	.= ON	OFF	ON	ON	OFF	ON	ON	ON
19	.= OFF	OFF	ON	ON	OFF	ON	ON	ON
20	.= ON	ON	ON	OFF	ON	OFF	ON	ON
21	.= OFF	ON	OFF	ON	OFF	ON	ON	ON
22	.= ON	OFF	OFF	ON	OFF	ON	ON	ON
23	.= OFF	OFF	OFF	ON	OFF	ON	ON	ON
24	.= ON	ON	ON	OFF	OFF	ON	ON	ON
25	.= OFF	ON	ON	OFF	OFF	ON	ON	ON
26	.= ON	OFF	ON	OFF	OFF	ON	ON	ON
27	.= OFF	OFF	ON	ON	OFF	ON	ON	ON
28	.= ON	ON	OFF	OFF	OFF	ON	ON	ON
29	.= OFF	ON	OFF	OFF	OFF	ON	ON	ON
30	.= ON	OFF	OFF	OFF	OFF	ON	ON	ON
31	.= OFF	OFF	OFF	OFF	OFF	ON	ON	ON
32	.= ON	ON	ON	ON	ON	OFF	ON	ON
33	.= OFF	ON	ON	ON	ON	OFF	ON	ON
34	.= ON	OFF	ON	ON	ON	OFF	ON	ON
35	.= OFF	OFF	ON	ON	ON	OFF	ON	ON
36	.= ON	ON	OFF	ON	ON	OFF	ON	ON
37	.= OFF	ON	OFF	ON	ON	OFF	ON	ON
38	.= ON	ON	OFF	OFF	ON	ON	OFF	ON
39	.= OFF	OFF	OFF	ON	ON	OFF	ON	ON
40	.= ON	ON	ON	OFF	ON	OFF	ON	ON
41	.= OFF	ON	ON	OFF	ON	OFF	ON	ON
42	.= ON	OFF	ON	OFF	ON	OFF	ON	ON

ADDR	1	2	3	4	5	6	7	8
43	.= OFF	OFF	ON	OFF	ON	OFF	ON	ON
44	.= ON	ON	OFF	OFF	ON	OFF	ON	ON
45	.= OFF	ON	OFF	OFF	ON	OFF	ON	ON
46	.= ON	OFF	OFF	OFF	ON	OFF	ON	ON
47	.= OFF	OFF	OFF	OFF	ON	OFF	ON	ON
48	.= ON	ON	ON	ON	OFF	OFF	ON	ON
49	.= OFF	ON	ON	ON	OFF	OFF	ON	ON
50	.= ON	ON	OFF	ON	ON	OFF	OFF	ON
51	.= OFF	OFF	ON	ON	OFF	OFF	ON	ON
52	.= ON	ON	OFF	ON	OFF	OFF	ON	ON
53	.= OFF	ON	OFF	ON	OFF	OFF	ON	ON
54	.= ON	OFF	OFF	ON	OFF	OFF	ON	ON
55	.= OFF	OFF	OFF	ON	OFF	OFF	ON	ON
56	.= ON	ON	ON	ON	OFF	OFF	ON	ON
57	.= OFF	ON	ON	OFF	OFF	OFF	ON	ON
58	.= ON	OFF	ON	OFF	OFF	OFF	ON	ON
59	.= OFF	OFF	ON	OFF	OFF	OFF	ON	ON
60	.= ON	ON	OFF	OFF	OFF	OFF	ON	ON
61	.= OFF	ON	OFF	OFF	OFF	OFF	ON	ON
62	.= ON	ON	OFF	OFF	OFF	OFF	ON	ON
63	.= OFF	OFF	OFF	OFF	OFF	OFF	ON	ON
64	.= ON	ON	ON	ON	ON	ON	OFF	ON
65	.= OFF	ON	ON	ON	ON	ON	OFF	ON
66	.= ON	OFF	ON	ON	ON	ON	OFF	ON
67	.= OFF	OFF	ON	ON	ON	ON	OFF	ON
68	.= ON	ON	OFF	ON	ON	ON	OFF	ON
69	.= OFF	ON	OFF	ON	ON	ON	OFF	ON
70	.= ON	OFF	OFF	ON	ON	ON	OFF	ON
71	.= OFF	OFF	OFF	ON	ON	ON	OFF	ON
72	.= ON	ON	ON	OFF	ON	ON	OFF	ON
73	.= OFF	ON	ON	OFF	ON	ON	OFF	ON
74	.= ON	OFF	ON	OFF	ON	ON	OFF	ON
75	.= OFF	ON	OFF	ON	ON	ON	OFF	ON
76	.= ON	ON	OFF	OFF	ON	ON	OFF	ON
77	.= OFF	ON	OFF	OFF	ON	ON	OFF	ON
78	.= ON	OFF	OFF	OFF	ON	ON	OFF	ON
79	.= OFF	OFF	OFF	OFF	ON	ON	OFF	ON
80	.= ON	ON	ON	ON	ON	OFF	ON	ON
81	.= OFF	ON	ON	ON	ON	OFF	ON	ON
82	.= ON	OFF	ON	ON	OFF	ON	OFF	ON
83	.= OFF	OFF	ON	ON	OFF	ON	OFF	ON
84	.= ON	ON	OFF	ON	OFF	ON	OFF	ON

ADDR	1	2	3	4	5	6	7	8
85	.= OFF	ON	OFF	ON	OFF	ON	OFF	ON
86	.= ON	OFF	OFF	ON	OFF	ON	OFF	ON
87	.= OFF	OFF	OFF	ON	OFF	ON	OFF	ON
88	.= ON	ON	ON	OFF	OFF	ON	OFF	ON
89	.= OFF	ON	ON	OFF	OFF	ON	OFF	ON
90	.= ON	OFF	ON	OFF	OFF	ON	OFF	ON
91	.= OFF	OFF	ON	OFF	OFF	ON	OFF	ON
92	.= ON	ON	ON	OFF	OFF	ON	OFF	ON
93	.= OFF	ON	OFF	OFF	OFF	ON	OFF	ON
94	.= ON	OFF	OFF	OFF	OFF	ON	OFF	ON
95	.= OFF	OFF	OFF	OFF	OFF	ON	OFF	ON
96	.= ON	ON	ON	ON	ON	OFF	OFF	ON
97	.= OFF	ON	ON	ON	ON	OFF	OFF	ON
98	.= ON	ON	OFF	ON	ON	ON	OFF	OFF
99	.= OFF	OFF	ON	ON	ON	OFF	OFF	ON
100	.= ON	ON	OFF	ON	ON	OFF	OFF	ON
101	.= OFF	ON	OFF	ON	ON	OFF	OFF	ON
102	.= ON	OFF	OFF	ON	ON	OFF	OFF	ON
103	.= OFF	OFF	OFF	ON	ON	OFF	OFF	ON
104	.= ON	ON	ON	ON	ON	OFF	OFF	ON
105	.= OFF	ON	ON	OFF	ON	OFF	OFF	ON
106	.= ON	OFF	ON	OFF	ON	OFF	OFF	ON
107	.= OFF	OFF	ON	OFF	ON	OFF	OFF	ON
108	.= ON	ON	OFF	OFF	ON	OFF	OFF	ON
109	.= OFF	ON	OFF	OFF	ON	OFF	OFF	ON
110	.= ON	ON	OFF	OFF	ON	OFF	OFF	ON
111	.= OFF	OFF	OFF	OFF	ON	OFF	OFF	ON
112	.= ON	ON	ON	ON	OFF	OFF	OFF	ON
113	.= OFF	ON	ON	ON	OFF	OFF	OFF	ON
114	.= ON	OFF	ON	ON	OFF	OFF	OFF	ON
115	.= OFF	OFF	ON	ON	OFF	OFF	OFF	ON
116	.= ON	ON	OFF	ON	OFF	OFF	OFF	ON
117	.= OFF	ON	OFF	ON	OFF	OFF	OFF	ON
118	.= ON	OFF	OFF	ON	OFF	OFF	OFF	ON
119	.= OFF	OFF	OFF	ON	OFF	OFF	OFF	ON
120	.= ON	ON	ON	OFF	OFF	OFF	OFF	ON
121	.= OFF	ON	ON	OFF	OFF	OFF	OFF	ON
122	.= ON	ON	ON	OFF	OFF	OFF	OFF	ON
123	.= OFF	OFF	ON	OFF	OFF	OFF	OFF	ON
124	.= ON	ON	OFF	OFF	OFF	OFF	OFF	ON
125	.= OFF	ON	OFF	OFF	OFF	OFF	OFF	ON
126	.= ON	OFF	OFF	OFF	OFF	OFF	OFF	ON

ADDR	1	2	3	4	5	6	7	8
127	.= OFF	OFF	OFF	OFF	OFF	OFF	ON	ON
128	.= ON	ON	ON	ON	ON	ON	ON	OFF
129	.= OFF	ON	ON	ON	ON	ON	ON	OFF
130	.= ON	OFF	ON	ON	ON	ON	ON	OFF
131	.= OFF	OFF	ON	ON	ON	ON	ON	OFF
132	.= ON	ON	OFF	ON	ON	ON	ON	OFF
133	.= OFF	ON	OFF	ON	ON	ON	ON	OFF
134	.= ON	ON	OFF	ON	ON	ON	ON	OFF
135	.= OFF	OFF	OFF	ON	ON	ON	ON	OFF
136	.= ON	ON	ON	OFF	ON	ON	ON	OFF
137	.= OFF	ON	ON	OFF	ON	ON	ON	OFF
138	.= ON	OFF	ON	OFF	ON	ON	ON	OFF
139	.= OFF	OFF	ON	OFF	ON	ON	ON	OFF
140	.= ON	ON	OFF	ON	ON	ON	ON	OFF
141	.= OFF	ON	OFF	OFF	ON	ON	ON	OFF
142	.= ON	OFF	OFF	OFF	ON	ON	ON	OFF
143	.= OFF	OFF	OFF	OFF	ON	ON	ON	OFF
144	.= ON	ON	ON	ON	OFF	ON	ON	OFF
145	.= OFF	ON	ON	ON	OFF	ON	ON	OFF
146	.= ON	ON	OFF	ON	ON	ON	ON	OFF
147	.= OFF	OFF	ON	ON	OFF	ON	ON	OFF
148	.= ON	ON	OFF	ON	OFF	ON	ON	OFF
149	.= OFF	ON	OFF	ON	OFF	ON	ON	OFF
150	.= ON	OFF	OFF	ON	OFF	ON	ON	OFF
151	.= OFF	OFF	OFF	ON	OFF	ON	ON	OFF
152	.= ON	ON	ON	ON	OFF	OFF	ON	ON
153	.= OFF	ON	ON	ON	OFF	OFF	ON	ON
154	.= ON	OFF	ON	OFF	OFF	ON	ON	OFF
155	.= OFF	OFF	ON	OFF	OFF	ON	ON	OFF
156	.= ON	ON	OFF	OFF	OFF	ON	ON	OFF
157	.= OFF	ON	OFF	OFF	OFF	ON	ON	OFF
158	.= ON	ON	OFF	OFF	OFF	ON	ON	OFF
159	.= OFF	OFF	OFF	OFF	OFF	ON	ON	OFF
160	.= ON	ON	ON	ON	ON	OFF	ON	OFF
161	.= OFF	ON	ON	ON	ON	OFF	ON	OFF
162	.= ON	OFF	ON	ON	ON	OFF	ON	OFF
163	.= OFF	OFF	ON	ON	ON	OFF	ON	OFF
164	.= ON	ON	ON	ON	ON	OFF	ON	OFF
165	.= OFF	ON	ON	ON	ON	OFF	ON	OFF
166	.= ON	OFF	OFF	ON	ON	OFF	ON	OFF
167	.= OFF	OFF	OFF	ON	ON	OFF	ON	OFF
168	.= ON	ON	ON	OFF	ON	OFF	ON	OFF

ADDR	1	2	3	4	5	6	7	8
169	.= OFF	ON	ON	OFF	ON	OFF	ON	OFF
170	.= ON	OFF	ON	ON	OFF	ON	ON	OFF
171	.= OFF	OFF	ON	OFF	ON	OFF	ON	OFF
172	.= ON	ON	OFF	OFF	ON	OFF	ON	OFF
173	.= OFF	ON	OFF	OFF	ON	OFF	ON	OFF
174	.= ON	OFF	OFF	OFF	ON	OFF	ON	OFF
175	.= OFF	OFF	OFF	OFF	ON	OFF	ON	OFF
176	.= ON	ON	ON	ON	ON	ON	ON	OFF
177	.= OFF	ON	ON	ON	OFF	OFF	ON	OFF
178	.= ON	OFF	ON	ON	OFF	OFF	ON	OFF
179	.= OFF	OFF	ON	ON	OFF	OFF	ON	OFF
180	.= ON	ON	OFF	ON	OFF	OFF	ON	OFF
181	.= OFF	ON	OFF	ON	OFF	OFF	ON	OFF
182	.= ON	ON	OFF	ON	OFF	OFF	ON	OFF
183	.= OFF	OFF	OFF	ON	OFF	OFF	ON	OFF
184	.= ON	ON	ON	OFF	OFF	OFF	ON	OFF
185	.= OFF	ON	ON	OFF	OFF	OFF	ON	OFF
186	.= ON	OFF	ON					